



1946

# ZERO702

BATTERY SCISSORS



# USE MANUAL

## COMPANY

Rasor® Elettromeccanica S.r.l. was established in Milan in 1946 by Luigi Spinelli. For more than sixty years it has been producing automatic cutting systems, cutting units for textile applications and electric and pneumatic cutters.

EN  
2



dal 1946

Initially considered as a point of reference for cutting systems in the textile applications, the Rasor® products are nowadays widely used in other fields: chemical, automotive, nautical and sport sectors and in furniture manufacturing.

Rasor® can rely on the professional continuity of three generations, thanks to the precious support of the promoting partner, to his passion, dedication and great experience of seventy years.

The main characteristic of Rasor® is that each working phase, starting from the manufacturing of the product up to its packing and delivery, is carried out in Rasor® premises by qualified operators who have professionally grown up following the spirit of the company and of its founders. This ensures the high quality which Rasor® has always considered as essential since the beginning of its activity.

Following the innovative spirit mentioned above, our company is constantly focused on the improvement of the product quality, on the study and development of new materials and technologies.

## ACKNOWLEDGMENT

Dear Customer,

thank you for choosing a Rasor® Elettromeccanica S.r.l. product.

Rasor® has been a reference point in the field of cutting systems in the textile, clothing, furniture, tailoring, sport, chemical, automotive, nautical and insulating material sectors for years. Its production has been always synonymous with reliability attested by many of satisfied customers.

Rasor® quality system supervises all the company activities in order to provide the Customer with a service that meets its needs and expectations in terms of product quality, delivery reliability and stock of finished products.

All the parts of the devices have been planned and produced to guarantee an optimum performance. In order to keep the high quality level and the long reliability of the Rasor® products, it is recommended using only original spare parts and to contact the head office for any maintenance work.

## 1. GENERAL SAFETY RULES



This manual is an integral part of battery scissors ZERO702 and must be carefully read before using it, since it gives important indications with regards to its safe installation, use and maintenance. Keep it with care.



Before using battery scissors ZERO702, read carefully the following general safety rules.

EN

3

- **PACKAGING.**

After taking off the packaging make sure that the battery scissors are intact. In case of doubt do not use them and contact an authorized service centre. Do not leave pieces of packaging (plastic bags, foam polystyrene, boxes, etc.) within the reach of children or disabled persons, since they are potential sources of danger.

- **AVOID DANGEROUS ENVIRONMENTS.**

Prevent the battery scissors ZERO702 components from coming in contact with damp or wet surfaces.

- **KEEP CHILDREN AWAY.**

Unauthorized persons, in particular children, must be kept away from the working area.

- **KEEP THE WORKING AREA ALWAYS IN ORDER.**

The workplace must always be kept in order and well lightened; liquids or oil traces must not be present.

- **ALWAYS USE BATTERY SCISSORS ZERO702 PROPERLY.**

Use the battery scissors only to carry out the works they have been designed for; do not use them improperly.

- **OBSERVE THE USE OF THE TOOLS.**

Do not cut excessively thick materials and always check blade conditions.

- **AVOID ACCIDENTAL STARTINGS.**

Before connecting battery scissors ZERO702, make sure that everything is installed properly.

- **CLOTHING.**

Do not use large clothes or accessories that might get stuck in the moving parts.

- **GOGGLES AND PROTECTIVE METAL MESH GLOVES.**

Always use goggles, protective metal mesh gloves recommended by Rasor® during use and maintenance operations (according to UNI EN 388:2017 standard).

- **SPARE PARTS.**

During maintenance and replacement operations use only original spare parts.

Blade maintenance must be only performed by Rasor® technicians.

- **INSTALLATION.**

Any installation that is not in conformity with these specifications could jeopardize your safety and cancels the warranty.

## Informative letter

The installer and the maintenance man must know the content of this manual. Although the main features of the equipment described in this manual are not subject to change, **Rasor® Elettromeccanica S.r.l.** reserves the right to modify the components, details and accessories it deems necessary to improve the product or to meet manufacturing or commercial requirements at any time and without being obliged to update this manual immediately.

EN

4



### WARNING



### ALL RIGHTS ARE RESERVED ACCORDING TO THE INTERNATIONAL COPYRIGHT CONVENTIONS,

The reproduction of any part of this manual, in any form, is forbidden without the prior written authorization of Rasor® Elettromeccanica S.r.l.

The content of this guide can be modified without prior notice. Great care has been taken in collecting and checking the documentation contained in this manual to make it as complete and comprehensible as possible.

Nothing contained in this manual can be considered as a warranty, either expressed or implied - including, not in a restrictive way, the suitability warranty for any special purpose. Nothing contained in this manual can be interpreted as a modification or confirmation of the terms of any purchase contract.

Rasor® Elettromeccanica S.r.l. products have not been conceived to work in areas at risk of explosions and at high risk of fire and they cannot cut wet or damp materials. Moreover, they cannot work in case of rain.

In case of damage or malfunction, battery scissors ZERO702 must not be used until the Customer Care Technical Service has repaired them.

### Customer Care Technical Service



dal 1946

For any information, please contact  
RASOR®ELETTROMECCANICAS.r.l.

Via V. Caldesi, 6; 20161, MILANO (MI) - ITALY  
Phone: +39.02.66221231; Fax: +39.02.66221293  
e-mail: [info@rasor-cutters.com](mailto:info@rasor-cutters.com)  
web: [www.rasor-cutters.com](http://www.rasor-cutters.com)



### WARNING

The original configuration of the battery scissors must not be changed at all. On receiving them, make sure the supply corresponds to what has been ordered. In case of non-compliance immediately inform Rasor®. Also make sure the scissors have not been damaged during transport.





dal 1946

## 2. TRANSPORT AND PACKING

The scissors are delivered in a carrying case with the battery and the charger. The code of the ordered product and its serial number are indicated outside the package (see picture 1). The following accessories are contained in a bag inside the carrying case:

- 1) Quadrangular blade (4 sides);
- 2) Grease tube;
- 3) Drift for blade assembly/disassembly;
- 4) Butterfly wrench for blade nut disassembly.


EN  
5

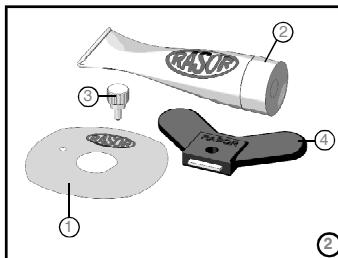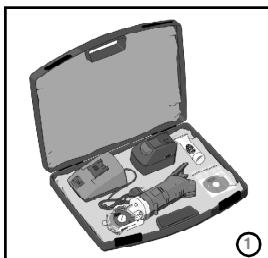

## 3. PLATE DATA

The manufacturer's identification and EC STANDARD 2006/42/EC conformity plate (see picture below) is located on the front part of the battery scissors.

**The plate must not be removed at all, even if the equipment is resold. Always refer to the serial number (written on the plate itself) when contacting the manufacturer.**  
Several safety warnings are printed on a card which is applied to the battery scissors; such warnings must be strictly followed by everyone dealing with the equipment. **The company is not to be held responsible for damage to property or accidents to people which might occur if the above-mentioned warnings are not observed. In such a case, the operator is the only person responsible.**

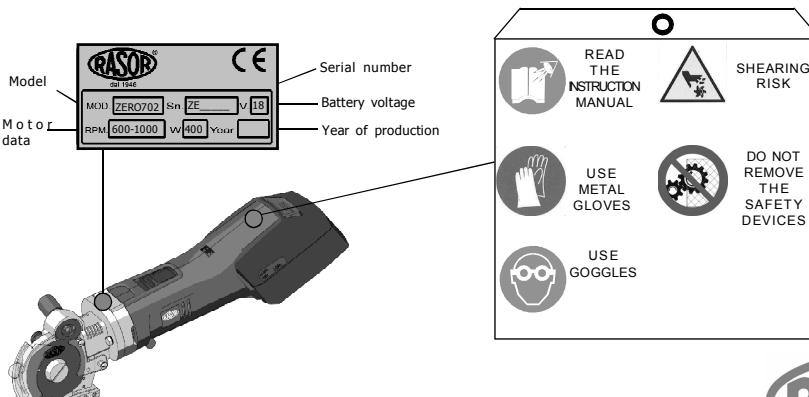

**RASOR®**  
dal 1946


#### 4. PRODUCT DESCRIPTION

This manual describes battery scissors model ZERO702 which are used in order to quickly cut fabrics in the textile industry, technical and composite fabrics. They are extremely versatile, light and precise in the cutting operation. Thanks to the use of a supporting front foot and of an effective cutting system with quadrangular blade, it is possible to use the battery scissors to cut different materials. In particular the scissors have been designed to cut difficult materials such as moquettes, polymeric materials, fiber glass, insulations and leather (even hide).

One special feature of battery scissors ZERO702 is their ability to sharpen the blade in each moment, without disassembling it, by means of a grinding wheel mounted on the scissors head. After carrying out this operation, it is possible to immediately start cutting again. A high power motor, perfectly balanced, with a high number of revolutions and totally free of maintenance, reduces the vibrations to the minimum. For this reason the battery scissors comply with Legislative Decree n° 187 dated 19/8/2005, which adopts European Directive n° 2002/44/EC concerning the risks deriving from mechanical vibrations.

The mechanical parts are made of high-quality steel, bronze and aluminium and require lubrication after several working hours.

Device components			
1	Sliding switch	9	Front protection guard
2	Battery Li-Ion 18V with LED	10	Motor support
3	Plastic motor casing	11	Back protection guard
4	Steel foot	12	Reference point
5	Steel polygonal blade	13	Carbide counterblade
6	Greaser	14	Plate locking the threads
7	Emery grinding wheel	15	Blade speed regulator
8	Sharpening button	16	Button for battery disconnection

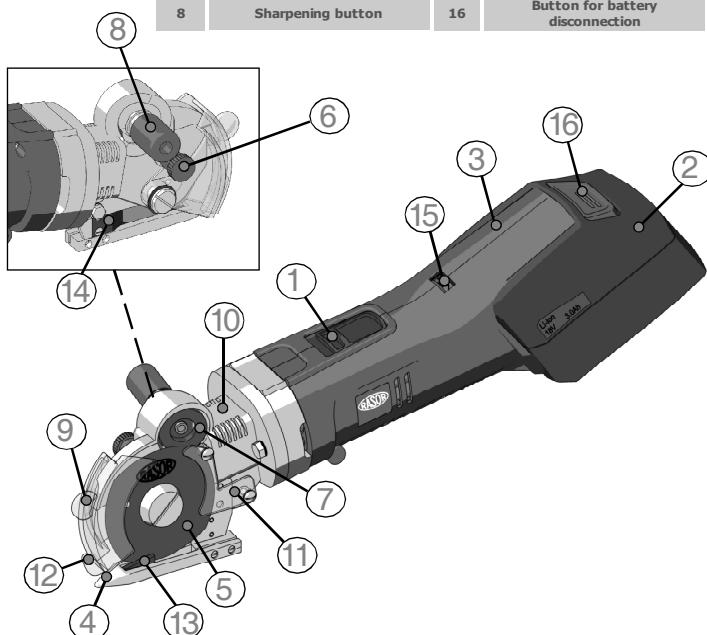

## 5. TECHNICAL FEATURES

EN  
7

### Battery scissors ZERO702 features

Blade diameter	70 mm with carbide counterblade
Blade supplied	70SHSS, HSS steel quadrangular blade Ø 70 mm
Blade speed	600-1000 revolutions/min, adjustable
Cutting working depth	about 20 mm
Motor power	DC 18 V - 400 W
Battery	Li-Ion 18 V, 5.0 Ah with LED indicator
Weight (with battery)	1900 g
Weight with package	4400 g
Minimum luminosity for working operations	LUX 200
Vibrations at the start up	< 2.5 m/s <sup>2</sup>
Temperature	0 ~ 55°C
Humidity	10 ~ 95% without condensate

### Features of the available blades

70SHSS	HSS steel quadrangular blade Ø 70 mm
70EHSS	HSS steel hexagonal blade Ø 70 mm
70CEXT	Extra steel circular blade Ø 70 mm
70DHSS	HSS steel decagonal blade Ø 70 mm
70SHSSTF	Teflon® coated HSS steel quadrangular blade Ø 70 mm
70EHSSTF	Teflon® coated HSS steel hexagonal blade Ø 70 mm
70EMD	Integral carbide hexagonal blade Ø 70 mm

The technical data is only indicative and it can be changed without notice

## 6. NOISE LEVEL

The maximum acoustic pressure level emitted by battery scissors ZERO702 is about 60 dB (A). Noise tests have been carried out in compliance with Standard UNI EN ISO 15744:2008. The device noise levels, measured at different distances (without any sound wave filtering system), vary in the extent of few db (A).

## 7. FIELD OF APPLICATIONS

Battery scissors ZERO702 have been designed, manufactured and assembled to cut every kind of fabrics or materials, with the exception of metal, plastic or wood, by means of rotary blades.

This equipment must not work:

- in areas prone to explosions;
- in presence of fine dust or corrosive gases;
- to cut plastic, metal and wooden materials.

**It is forbidden to use battery scissors ZERO702 for purposes different from the above-mentioned ones.**

## 8. USE WARNINGS

We recommend following the indications below in order to always work in safety conditions.

- All the operations must be carried out complying strictly with the safety rules of the country where the device is sold.
- It is STRICTLY FORBIDDEN to smoke during the installation or adjustment operations of the battery scissors.
- The Customer undertakes to comply with and make his staff observe all the rules and regulations in force concerning safety, prevention of accidents and health in the work place. Therefore, the Customer assumes the responsibility to strictly follow all the rules and regulations in force, as well as the special provisions in force in sport and public installations the Customer declares to know after receiving all the relative necessary pieces of information.
- **The battery scissors work also without their safety protective device. This protective device must NEVER be removed.**
- Always check the resistance of the material to be cut and the kind of blade which is being used.
- The Customer shall equip his own personnel with all the individual safety protections for the execution of the works, as well as with the ones which might be prescribed by the Manufacturer due to specific danger conditions of the plant or of the area where the personnel must work.
- Only one operator must use the battery scissors always standing behind the guide handle. Do not make any adjustment while the blade is working.
- It is allowed to assemble battery scissors ZERO702 on machines O.E.M. on condition that their original structure is not modified. Otherwise, the intervention must be certified by Rasor®.

## 9. RESIDUAL RISKS

Even though the battery scissors are safe, operators must pay attention to preserve their and other people's safety.

- ⌚ At the end of the working operations, the metallic components could be very hot.
- ⌚ The cutting blade can work even when the protective device is disassembled.

## 10. RULES FOR THE CARE OF THE LITHIUM-ION BATTERIES



The following rules should be noted when caring for your lithium-ion batteries if you want to maintain the performance of the energy store for as long as possible:

- The first charge is crucial. Fully charge the battery before using it for the first time.
- Each battery only has a limited number of charge cycles. Don't therefore recharge the battery at every opportunity. Instead use it until it is almost flat (10...20% of charge). Depending on loading, the high-quality, 5Ah capacity battery cells can be charged up to 2,000 times. Assuming 250 days are worked a year and that the batteries are charged daily, this corresponds to a battery life of 8 years.
- If the battery is discharged below its nominal voltage, this can trigger processes which damage or destroy the battery. The batteries are therefore fitted with electronics which warn the user and shut down the device before total discharge can take place.
- Frequent overcharging can also permanently damage the battery. The charger therefore automatically finishes the charging process as soon as the battery is fully charged. Do not attempt to force more charge into the batteries by unplugging and reconnecting the charger. Such action will not produce a higher charge - it will only damage the batteries.
- Charging should generally only be undertaken at room temperature (around 18 - 21 degrees). Avoid charging a cold battery as it damages the cells. Always warm the battery up to room temperature before charging, especially when it is cold outdoors in winter.
- High temperatures also damage the battery. Never leave the battery, and preferably not the entire tool box, in the car or direct sunlight on hot sunny days. At temperatures above 60 degrees Celsius, the Li-ion battery permanently loses capacity.
- Lithium-ion batteries shouldn't be stored flat or fully charged for long periods. Extensive testing has found a capacity of 40...50 % and low temperatures (but not below 0°C) to be optimum for storage. Ideally they should be kept at 5°C to 10°C. Recharging is needed at least every 12 months as the batteries will self-discharge.
- A battery which is not being used should be stored in a cool but not cold place. Even when not being used, batteries lose energy. The Li-ion battery loses 3...5% of its charge a month.
- If a lithium-ion battery is not used for a long period, it should be recharged after 12 months at the latest otherwise it will be irreparably damaged.
- Old, used batteries must of course be disposed of in an environmentally friendly manner.

## 11. USE

To use the battery scissors manually, proceed as follows:

- 1) Release the battery (if it is charged) from the charger as described at paragraph 13;
- 2) Connect the battery to the motor and fix it following the slots on the battery;
- 3) Lay the material to be cut on a table;
- 4) Put the material on the cutting foot (see picture 3);
- 5) Let the switch slide forward in order to start the scissors;
- 6) Push the battery scissors in the desired direction, being careful to keep the material in front of them as stretched as possible and preventing it from curling in the front part of the scissors.

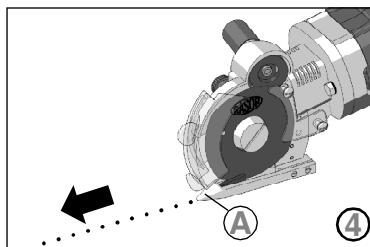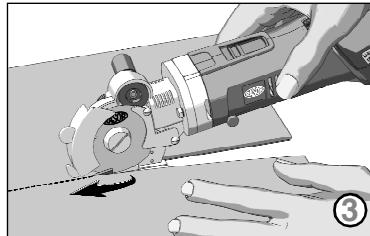


### NOTE

The thrust on the battery scissors must be as uniform as possible. To carry out linear cuts with precision (and to follow predetermined paths), we also recommend using the arrow point (see point "A" in picture 4).

## 12. SPEED REGULATION

The scissors ZERO702 have a regulator for 6 speed levels (see picture 5). It is possible to change the speed also when the scissors are working. The blade speed can go from 600 rpm (Pos. "1") to 1000 rpm.

The "standard" position is position "2" for most materials. It is advisable to use low speed levels for hard, gummy, plastic or adhesive materials. High speed levels are instead suggested for natural fibers and simple fabrics or when a raised speed is needed.

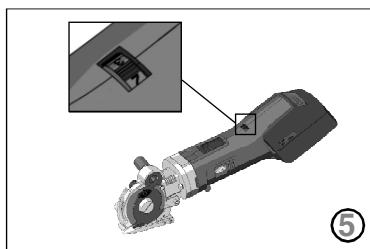

### WARNING



**Using the battery scissors ZERO702 with high blade speed accelerates the wear of the moving parts such as blade, counterblade and gear pair.**

**The high blade speed determines also a faster loss of battery charge.**

## 13. BATTERY CHARGING

When the battery is discharged, it is necessary to charge it using exclusively the charger provided with the tool.

**WARNING**



Always check if the charger voltage corresponds to the network voltage of the country where the scissors are used.

**WARNING**




Do NOT use chargers that are different from the one provided (FEIN ALG 50 - 50Hz/230V - 10,8-18V) - (FEIN ALG 30 - 50Hz/230V - 10,8-18V optional).

Release the battery from the motor by pushing the orange button, then insert it in the charger following the instructions written on the manual provided with the charger.

It is possible to check the charging status by means of the LED lights placed on the charger (see picture 6).

EN

11

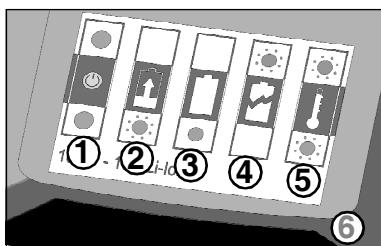

LED indicator		Meaning
1	continuous yellow light	The battery charger is ready for operation; mains voltage is given
2	green flashing light	The rapid charging is active
3	continuous green light	The rapid charging is completed. Trickle charging is active (only NiCd/NiMH batteries)
4	red flashing light	Charging not possible due to the following possible reasons: - Contacts contaminated. Improvement measure: Clean the contacts by inserting and removing the battery several times. - The battery is defective. Improvement measure: Replace the battery!
5	green flashing light and red flashing light	The battery temperature is not within the charge-temperature range of 0 °C to +45 °C. The rapid charging procedure starts as soon as the battery reaches the allowable charge-temperature range.


Using the standard charger CH01 (provided with the scissors), the time needed for a complete charge is about 50 minutes; using the fast charger CH02 (optional), the time needed for a complete charge is about 30 minutes.

## 14. BLADE SHARPENING

After many hours of a continuative use of the battery scissors or if they are not able to cut anymore, it is necessary to sharp the blade. To carry out this operation, start the blade and press sharpening button "1" for 3-4 seconds (as shown in picture 7). Repeat this operation 2-3 times.

**EN  
12**

If the sharpening process should be ineffective, check the wear of the emery grinding wheel "2" (see picture 7). If wheel "2" is too worn or dirty, replace it by removing the blade with the proper tool.

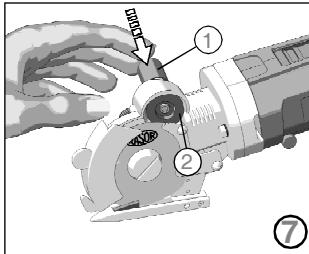

### **WARNING**




The sharpening button can be only pressed if the front mobile protection is completely lowered.

## 15. LUBRICATION

Every 3-4 days of use, it is necessary to lubricate the pair of gears. To carry out this operation, remove protective plug "A" located on the head of the battery scissors and fill it with the supplied lubricating grease.

Screw plug "A" again few turns. Screw plug "A" some turns every 2-3 working hours (see picture 8).

Fill the plug again, once it has been tightened.

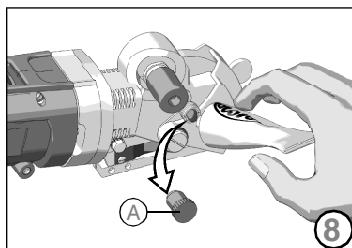

### **WARNING**








The blade must never be dirty with grease or oil.

## 16. BLADE REPLACEMENT

If the blade is no more able to cut (even after repeating the sharpening operation several times), it is necessary to replace it. In order to carry out this operation, use butterfly wrench "1" and drift "3" locking the blade (shown in picture 9).

In order to replace the blade, proceed as follows:

- 1) Use some protective gloves in compliance with Italian Legislative Decree 81/08;
- 2) Remove the safety back fixed protection "A" (see picture 10), by unscrewing the two slotted screws "C" by means of a screwdriver (not supplied by the manufacturer) as shown in picture 11.  
Remove the safety front mobile protection "B" (see picture 10) by unscrewing pin "D" and by extracting the two washers "E" as shown in picture 11.
- 3) Insert drift "3" (see picture 12) into hole "F" in order to lock the blade (the hole in the blade must correspond to the hole in the structure).
- 4) Use butterfly wrench "1" in order to unscrew nut "G" (see picture 12) and remove blade "H" (see picture 13).
- 5) Replace the worn blade with the new one "2", being careful to center the blade on the shaft, in the correct position, and remember to assemble it with the side with the writing RASOR positioned towards the external side of the battery scissors.
- 6) Assemble all the components again and carry out some cutting and sharpening tests.

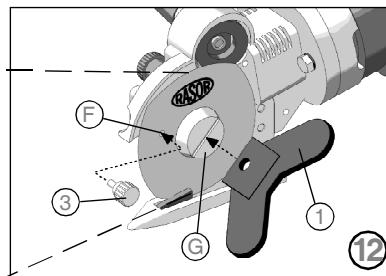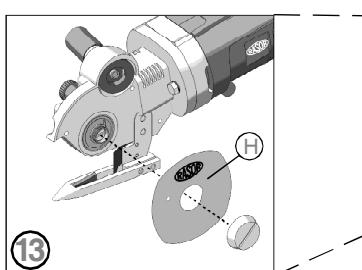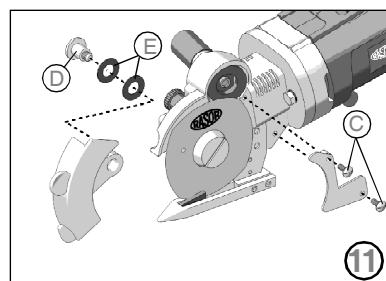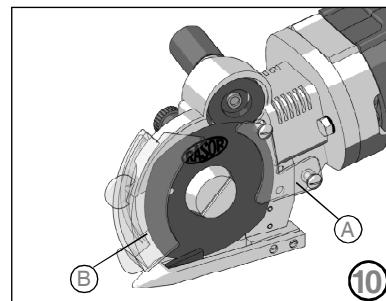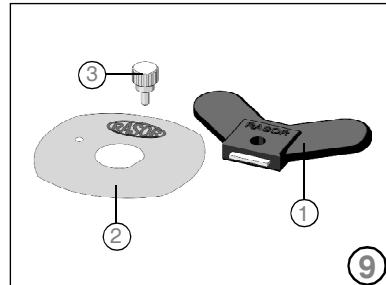

## 17. TROUBLESHOOTING

**EN  
14**

✖ PROBLEM	➡ SOLUTION
The fabric is not cut or it gets stuck between the blade and the counterblade	Check that blade and counterblade contact with each other Check the kind of fabric Sharpen the blade Check the fabric thickness Check the compatibility between blade and fabric Make sure that the motor turns correctly Reduce the feeding speed Check the counterblade integrity Carry out the lubrication
The battery scissors are noisy	Disassemble the blade and remove the material residues Check the wear of the pair of gears
The scissors start slowly, work intermittently or do not start	Check the battery charge level by means of the LED indicator Check if the battery has been correctly inserted Check the plastic joint between motor and cutting part


## 18. SPARE PARTS / EXPLODED VIEW

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
705HSS	QUADRANGULAR BLADE Ø 70 mm, H.S.S. STEEL	F 7027	JOINT	F 7044	BACK PROTECTION GUARD FASTENING SCREW	SW108700	EMERY GRINDING WHEEL PIN
BA 001	MOTOR CASING OF PLASTIC	F 7028	CLOSING RING	F 7045	BACK PROTECTION GUARD	SW108800	EMERY GRINDING WHEEL SPRING Ø 11 mm
BA 002	SLIDING SWITCH	F 7029	WORM SCREW BEARING mm 10x22x6	F 7045CPL	BACK PROTECTION SET	SW108900	SCREWED BUSH
BA 003	MAGNET MOTOR WITH COUPLING POINTS	F 7030	WORM SCREW - MOD. 1	F 7049	PLATE LOCKING THE THREADS	SW109000	EMERY GRINDING WHEEL SPRING Ø 6 mm
BA 004	MOTOR FLANGE FASTENING SCREW	F 7030CPL	COMPLETE WORM SCREW - MOD. 1	F 7050	PLATE LOCKING THE THREADS FASTENING SCREW	SW109200	EMERY GRINDING WHEEL CAP FASTENING SCREW
BA 005	MOTOR CASING FASTENING SCREW	F 7031	ANTIFRICTION BUSHING	F 7053	WELD FOOT	SW109300	STEEL WASHER
BA 006	ELECTRONIC CONTROL CIRCUIT	F 7032	SNAP RING	F 7053CPL	COMPLETE STEEL FOOT	T104500	FRONT PROTECTION GUARD FASTENING SCREW
BA 008	LOCKING SPRING	F 7033	CORRUGATED THRUST WASHER	F 7054	FOOT FASTENING SCREW	T104501	CONVEGED WASHER
BA 010	Zero702 COMPLETE MOTOR	F 7036	THRUST WASHER	F 7054/1	TOOTHED WASHER	T104700	GREASER CAP
BAT18	BATTERY Li-Ion 18V, 5.0 Ah WITH LED	F 7037	RING GEAR	F 7055	WIDIA COUNTERBLADE WITH SPRING	T104800	GREASER
CH01	STANDARD CHARGER	F 7038	RING GEAR BEARING	F 7056	COUNTERBLADE FASTENING SCREW	T105200	MOTOR SUPPORT FASTENING BOLT
F 5057	DRIFT LOCKING THE BLADE	F 7039CPL	COMPLETE RING GEAR	F 7061	SUB-BLADE RING	T105300	SPLIT WASHER
F 5059	BLADE ASSEMBLY/DISASSEMBLY WRENCH	F 7042	BLADE FIXING RING NUT	FRN70B	ZERO702 COMPLETE ACCESSORIES SET	T106000	RING GEAR LEFT FASTENING SCREW
F 7006	EMERY GRINDING WHEEL CAP	F 7043	FRONT PROTECTION GUARD	SW108600	EMERY GRINDING WHEEL: MEDIUM GRAIN	T107900	LUBRICATING GREASE
F 7026B	Zero702 COMPLETE MOTOR SUPPORT	F 7043CPL	FRONT PROTECTION SET	SW1086CPL	COMPLETE EMERY GRINDING WHEEL UNIT		

## OPTIONAL ACCESSORIES

CODE	DESCRIPTION
BAT18	BATTERY Li-Ion <sup>®</sup> 18V, 5.0 Ah WITH LED
CH01	STANDARD CHARGER (220-240 V)
CH02	FAST CHARGER (220-240 V)
CH0101	STANDARD CHARGER (110 V)
CH0202	FAST CHARGER (110 V)



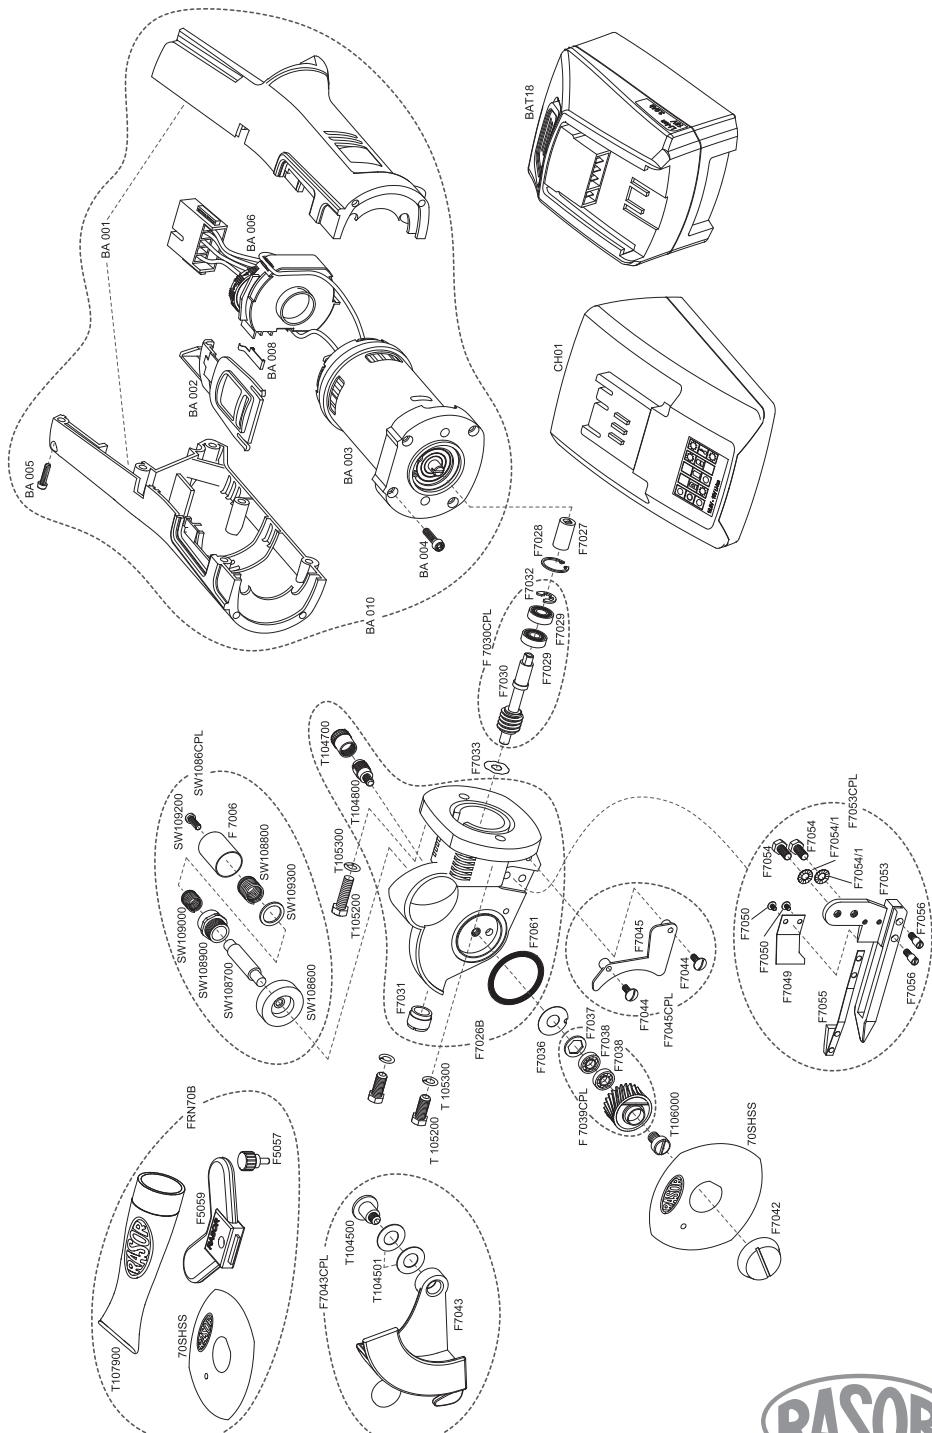

**RASOR**®

1946

## **WARRANTY**

Razor® Elettromeccanica S.r.l. battery scissors have a 12 month warranty from the date indicated on the last page of this manual, except in case of different written agreements.

The warranty covers all manufacturing and material defects. Replacement and repair operations are covered only if carried out by our company and at our workshop. If in-warranty goods need to be repaired, **the customer must always send the complete machine to Razor®.**

### **Single units will not be repaired under warranty.**

The material to be repaired must be sent CARRIAGE FREE.

Once the equipment has been repaired, it will be sent CARRIAGE FORWARD to the customer. The warranty covers neither technicians' intervention on the site where the battery scissors are used nor their disassembly.

If for practical reasons, one of our technicians is sent to the premises, the customer will be charged the costs plus the travelling expenses.

The warranty does not include:

- ☒ failure caused by wrong use or assembly,
- ☒ failure caused by external agents,
- ☒ failure caused by lack of maintenance or negligence;
- ☒ blades and parts subject to wear.

### **WARRANTY FORFEITURE:**

- ☒ In case of arrearage or other breaches of contract,
- ☒ Whenever changes or repairs are carried out on our battery scissors without our prior authorization,
- ☒ Whenever the serial number is tampered with or cancelled,
- ☒ Whenever the damage is caused by improper use, bad treatment, bumps, falls and other causes not due to normal working conditions,
- ☒ Whenever the unit seems tampered with, dismantled or previously repaired by unauthorized staff,
- ☒ In case the battery scissors are used for purposes that are different from the ones described in this manual.
- ☒ In case non-original Razor® spare parts are installed.

All repair operations carried out under warranty do not interrupt its duration.

### **All disputes will be settled in the court of justice of Milan (Italy).**

We thank you in advance for the attention you will pay to this manual and we invite you to inform us of any change you deem necessary to improve it and make it more complete.

**TRANSPORTATION CERTIFICATE**

Concerning the transport according to the dangerous goods regulations of the different transport modes as in force since January, 1st 2003 and changes effective from 2015

**WE HEREWITNESS CERTIFY THAT EACH BATTERY OF THIS TYPE IS PROVED TO MEET THE REQUIREMENTS OF EACH APPLICABLE TEST IN THE UN MANUAL OF TESTS AND CRITERIA, PART III, SUB-SECTION 38.3, REV. 5, AMEND. 2**

CERTIFICATE/REPORT NO.: BU-2015-03180-2-UN	
UN No. / Shipping name:	UN 3480 LITHIUM ION BATTERY UN 3481 LITHIUM ION BATTERY packed with equipment / contained in equipment
Certified Product:	LITHIUM ION BATTERY (rechargeable)
Model Designation:	5S2P INR18650-25R (18V/5Ah)
Article Number:	B18A.173.01
Certificate Holder:	C. & E. Fein GmbH Hans-Fein-Straße 81 · D-73529 Schwäbisch Gmünd · Germany

PERFORMED TESTS		RESULTS
38.3.4.1	Test 1: Altitude Simulation	passed
38.3.4.2	Test 2: Thermal Test	passed
38.3.4.3	Test 3: Vibration	passed
38.3.4.4	Test 4: Shock	passed
38.3.4.5	Test 5: External Short Circuit	passed
38.3.4.6	Test 6: Impact/Crush	not applicable
38.3.4.7	Test 7: Overcharge	passed
38.3.4.8	Test 8: Forced Discharge	not applicable

**► Watt-hour rating of the battery: 90,00 Wh ▲**

As the Watt-hour rating of the battery is not more than 100 Wh, this lithium ion battery is not subject to other provisions of ADR, RID, ADN and IMDG-Code if shipped in compliance with Special Provision 188.

Effective January 1, 2013 this lithium ion battery can be shipped by air in accordance with ICAO-TI or IATA-DGR, Section II or Section IB, Packing Instructions (PI) 965 (Lithium Ion Batteries), PI 966 (Lithium Ion Batteries, packed with equipment) and PI 967 (Lithium Ion Batteries, contained in equipment) as appropriate.

08.Mai.2015

Date of issue

Signature: Sven Bauer, CEO

**www.battery  
university.eu**

batteryuniversity.eu GmbH  
Am Sportplatz 20 · 63791 Karlsstein (Main)  
Tel. +49(0)6188 99 410-0 · Fax 99 410-20  
mail@batteryuniversity.eu · www.batteryuniversity.eu

**RASOR ELETTROMECCANICA SRL**

Via Vincenzo Caldesi 6

20161 Milan · Italy

ph. +39 02 66 22 12 31

fax +39 02 66 22 12 93

[info@rasor-cutters.com](mailto:info@rasor-cutters.com)

[www.rasor-cutters.com](http://www.rasor-cutters.com)

**FOLLOW US:**

