



1946

SW100 SL

CUTTING UNIT



USE MANUAL

Rasor® Elettromeccanica S.r.l. was established in Milan in 1946 by Luigi Spinelli. For more than sixty years it has been producing automatic cutting systems, cutting units for textile applications and electric and pneumatic cutters.



Initially considered as a point of reference for cutting systems in the textile applications, the Rasor® products are nowadays widely used in other fields: chemical, automotive, nautical and sport sectors and in furniture manufacturing.

Nowadays Rasor® can rely on the professional continuity of two generations, with the experience inherited from the promoting partner, with his passion and dedication.

The main characteristic of Rasor® is that each working phase, starting from the manufacturing of the product up to its packing and delivery is carried out in Rasor® premises by qualified operators who have professionally grown up following the spirit of the company and of its founders. This ensures the high quality which Rasor® has always considered as essential since the beginning of its activity.

Following the innovative spirit mentioned above, our company is constantly focused on the improvement of the product quality, on the study and development of new materials and technologies.

ACKNOWLEDGMENT

Dear Customer,

thank you for choosing a Rasor® Elettromeccanica S.r.l. product.

Rasor® has been a reference point in the field of cutting systems in the textile, clothing, furniture, tailoring, sport, chemical, automotive, nautical and insulating material sectors for years. Its production has been always synonymous with reliability attested by many of satisfied customers.

Rasor® quality system supervises all the company activities in order to provide the Customer with a service that meets its needs and expectations in terms of product quality, delivery reliability and stock of finished products.

All the parts of the devices have been planned and produced to guarantee an optimum performance. In order to keep the high quality level and the long reliability of the Rasor® products, it is recommended to use only original spare parts and to contact the head office for any maintenance work.

1. GENERAL SAFETY RULES



This manual is an integral part of cutting unit SW100SL and must be carefully read before using it since it gives important indications with regards to its safe installation, use and maintenance. Keep it with care.



Before using cutting unit SW100SL, read carefully the following general safety rules.

EN
3

- **PACKAGING.**
After taking off the packaging make sure that the cutting unit is intact. In case of doubt do not use it and contact an authorized service centre. Do not leave pieces of packaging (plastic bags, foam polystyrene, boxes, etc.) within the reach of children or disabled persons since they are potential sources of danger.
- **AVOID DANGEROUS ENVIRONMENTS.**
Prevent the cutting unit SW100SL components from coming in contact with damp or wet surfaces.
- **KEEP CHILDREN AWAY.**
Unauthorized persons, especially children, must be kept away from the working area.
- **FEED CABLE.**
Prevent the feed cable from coming in contact with hot objects, pointed surfaces or sharp edges. Never pull the feed cable of the machine. It must never be replaced by the user. If necessary contact professionally qualified staff.
- **KEEP THE WORKING AREA ALWAYS IN ORDER.**
The workplace must always be kept in order and well lightened; liquids or oil traces must not be present.
- **ALWAYS USE CUTTING UNITS SW100SL PROPERLY.**
Use the cutting units only to carry out the works they have been designed for; do not use them improperly.
- **OBSERVE THE USE OF THE TOOLS.**
Do not cut excessively thick materials and always check blade conditions.
- **AVOID ACCIDENTAL STARTS.**
Before connecting cutting unit SW100SL, make sure that everything is installed properly.
- **CLOTHING.**
Do not use large clothes or accessories that might get stuck in the moving parts.
- **GOGGLES AND PROTECTIVE METAL MESH GLOVES.**
Always use goggles, protective metal mesh gloves approved by Rasor® during use and maintenance operations (according to UNI EN 388:2017 standard).
- **SPARE PARTS.**
During maintenance and replacement operations use only original spare parts. Blade maintenance must be only performed by Rasor® technicians.
- **INSTALLATION.**
Any installation that is not in conformity with these specifications could jeopardize your safety and cancels the warranty.



dal 1946

Informative letter

The installer and the maintenance man must know the content of this manual. Although the main features of the machine described in this manual are not subject to change, **Rasor® Elettromeccanica S.r.l.** reserves the right to modify the components, details and accessories it deems necessary to improve the machine or to meet manufacturing or commercial requirements at any time and without being obliged to update this manual immediately.

EN
4



WARNING



ALL RIGHTS ARE RESERVED ACCORDING TO THE INTERNATIONAL COPYRIGHT CONVENTIONS,

The reproduction of any part of this manual, in any form, is forbidden without the prior written authorization of Rasor® Elettromeccanica S.r.l.

The content of this guide can be modified without prior notice. Great care has been taken in collecting and checking the documentation contained in this manual to make it as complete and comprehensible as possible.

Nothing contained in this manual can be considered as a warranty, either expressed or implied - including, not in a restrictive way, the suitability warranty for any special purpose. Nothing contained in this manual can be interpreted as a modification or confirmation of the terms of any purchase contract.

Rasor® Elettromeccanica S.r.l. machines have not been conceived to work in areas at risk of explosions and at high risk of fire and they cannot cut wet or damp materials. Moreover, they cannot work in case of rain.

In case of damage or malfunction, cutting unit SW100SL must not be used until the Customer Care Technical Service has repaired them.

Customer Care Technical Service



dal 1946

For any information, please contact
RASOR® ELETTROMECCANICA S.r.l.
Via V. Caldesi, 6; 20161, MILANO (MI) - ITALY
Tel: +39.02.66221231; Fax: +39.02.66221293
e-mail: info@rasor-cutters.com
web: www.rasor-cutters.com

WARNING



The original configuration of the cutting unit must not be changed at all.
On receiving the machine make sure the supply corresponds to what has been ordered.
In case of non-compliance immediately inform Rasor®.
Also make sure the cutting unit has not been damaged during transport.





dal 1946

2. TRANSPORT AND PACKAGING

The cutting unit is delivered in a cardboard box, inside which there are various options. The code of the ordered product and its serial number are indicated outside the package (see picture 1). The following accessories are contained in a bag inside the package:

- 1) Polygonal blade;
- 2) Wrench for blade nut disassembly.
- 3) Shuko cable without plug;
- 4) Drift for blade disassembly.


EN
5

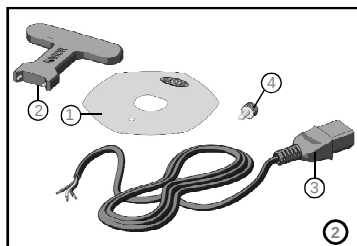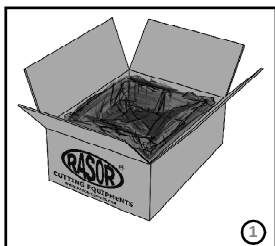

3. PLATE DATA

The manufacturer's identification and CE STANDARD 2006/42/CE conformity plate (see picture below) is located on the front part of the cutting unit.

The plate must not be removed at all, even if the machine is resold. Always refer to the serial number (written on the plate itself) when contacting the manufacturer. Several safety warnings are printed on a card which is applied to the cutting unit feeding cable; such warnings must be strictly followed by everyone dealing with the machine. **The company is not to be held responsible for damage to property or accidents to people which might occur if the above-mentioned warnings are not observed. In such a case, the operator is the only person responsible.**

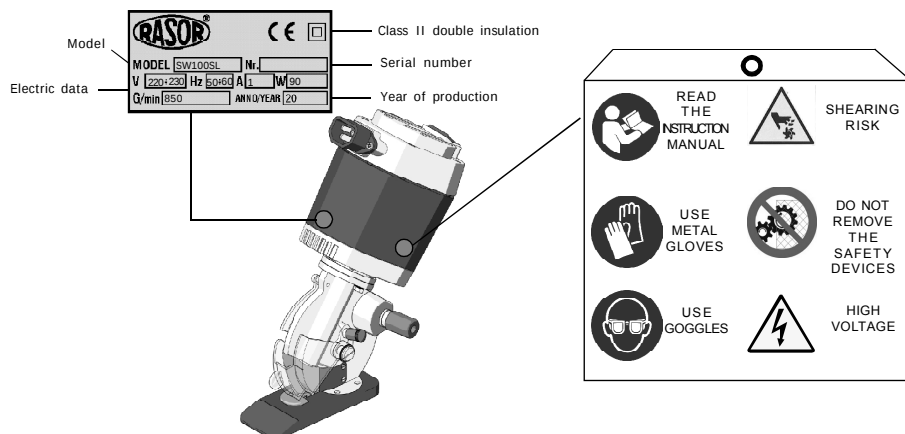


4. PRODUCT DESCRIPTION

The fixture described in this manual is a cutting unit model SW100SL which can be assembled on automatic machines (e.g. spreaders, computerized cutting) by means of proper holes located in the motor support. SW100SL can operate continuously and it can cut at various widths by means of multiple installation. By cutting with the blade and the counterblade always in contact and thanks to the steel upper quality of the blade supplied, SW100SL guarantees the clean separation without frayings of the two borders of the cut material. Moreover, the single-phase motor guarantees a blade peripheral speed of 260 m/min allowing great cutting performances in terms of traversing speed/speed of travel.

The 100 mm blade diameter and the light weight (only 2,7 Kg) of the cutting unit make it ideally suited for small radius cut profiles on materials with thickness up to 3,5 cm. A sharpener assembled on the cutting unit head allows sharpening the blade at any moment without disassembling it. After carrying out this operation, it is possible to start cutting again. A high power motor, perfectly balanced, with a high number of revolutions and totally free of maintenance, reduces the vibrations to the minimum, thus making the cutting unit comply with Italian Legislative Decree No. 81 dated 9/4/2008 "Testo Unico sulla Salute e Sicurezza sul Lavoro" (Consolidated Act on Health and Safety at Work), Title VIII - CHAPTER III (worker protection from mechanical vibration risks). The mechanical parts are made of high resistance steel, bronze and aluminium and require lubrication after several working hours.

Device components

1	Switch provided with light	7	Aluminium base covered with Teflon®
2	Motor cover	8	Polygonal blade
3	Connector socket	9	Plate locking the threads
4	Motor frame	10	Greaser
5	Sharpener push button	11	Carbide counterblade
6	Emery grinding wheel	12	Motor lower cover with assembly holes
7	Movable front protection	13	Motor support

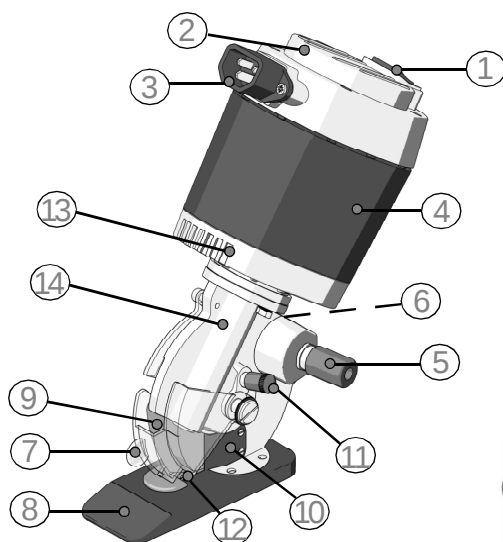

5. TECHNICAL FEATURES

Cutting unit SW100SL features		Features of the available blades	
Blade diameter	100 mm with carbide counter blade	10EHSS	6 side blade Ø 100 mm, H.S.S. steel
Blade speed	850 rpm	10CSW	Circular blade Ø 100 mm, Extra steel
Cutting working depth	about 35 mm	10SEXTG	4 side blade Ø 100 mm, Germany Extra steel
Motor power	Single phase 220 V - 90 W	10EHSTF	6 side blade Ø 100 mm, H.S.S. steel covered with Teflon®
Max. Absorption	1 A	10EMD	6 side blade Ø 100 mm, carbide metal
Weight (with feeding cable)	2650 g		
Weight with package	4750 g		
Electric cable length	1,5 mt		
Minimum light for working operations	LUX 200		
Vibrations at the start up	< 2,5 m/s ²		
Temperature	0 ~ 55°C		
Humidity	10 ~ 95 % without condensate		

This technical data is only indicative and may be subject to change without notice.

6. NOISE LEVEL

The maximum acoustic pressure level emitted by cutting unit SW100SL is about 60 dB (A). Noise tests have been carried out in compliance with Standard UNI EN ISO 11202:2010. The device noise levels, measured at different distances (without any sound wave filtering system), vary in the extent of few db (A).

NOTE

It is advisable for cutting unit SW100SL owners to verify the compliance with the standard concerning safety of workers: Italian legislative decree 81/08.

7. FIELD OF APPLICATION

Cutting unit SW100SL has been designed, manufactured and assembled to cut every kind of fabrics or materials, with the exception of metal, plastic or wood, by means of rotary polygonal blades.

This equipment must not work:

- in areas prone to explosions;
- in presence of fine dust or corrosive gases;
- on wet or damp materials;
- to cut plastic, metal and wooden materials.

It is forbidden to use cutting unit SW100SL for purposes different from the above-mentioned ones.

8. USE WARNINGS

We recommend following the indications below in order to work in safety conditions.


- All the operations must be carried out complying strictly with the safety rules of the country where the device is to be installed.
- It is **STRICTLY FORBIDDEN** to smoke during the installation or adjustment operations of the cutting unit.
- The Customer undertakes to comply with and make his staff observe all the rules and regulations in force concerning safety, prevention of accidents and health in the work place. Therefore, the Customer assumes the responsibility to strictly follow all the rules and regulations in force, as well as the special provisions in force in sport and public installations the Customer declares to know after receiving all the relative necessary information.
- **The cutting unit also works without its safety protective device. This protective device must NEVER be removed.**
- Always check the resistance of the material to be cut and the kind of blade which is being used.
- The Customer shall equip his own personnel with all the individual safety protections for the execution of the works, as well as with the ones which might be prescribed by the Manufacturer due to specific danger conditions of the plant or of the area where the personnel must work.
- Do not make any adjustment while the blade is working or while the electric plug is connected.
- Always pay attention to the electric cable position to prevent it from being cut or damaged by the blade.
- It is allowed to assemble cutting unit SW100SL on machines O.E.M. on condition that their original structure is not modified. Otherwise, the intervention must be certified by Rasor®.

9. ELECTRIC CONNECTION

Firstly make sure that the lines and electric systems of the machine, on which the SW100SL will be installed, are able to supply the cutting unit with power correctly, in compliance with the safety rules (for the feature required see par. 5).

CUIDADO

We suggest installing a magnetothermic safety device before the cutting unit and check that the ground circuit is effective. Before working on the feeding cable, unplug the unit. Check that electric connections and protections correspond to the driving force and to the plate data values (voltage and current), required by the different electric circuits. Possible faulty ground connections make the working conditions unsafe. Possible damages are not charged to Rasor®. Referring to the CEI 11-27/1 standard all the works carried out by means of electric current must be performed by skilled staff provided with all the devices required by the above-mentioned standard. For the works carried out under voltage, it is necessary that the employer certifies the suitability, against formative processes. As the cutting unit SW100SL is supplied without plug, the user must use a plug homologated in the country in which the cutting unit is used. In the European Countries a Shuko plug is required (see picture 3). Never change the length of the cable supplied. **The cutting unit SW100SL is a class II electric device; therefore, it does not need earthing.**

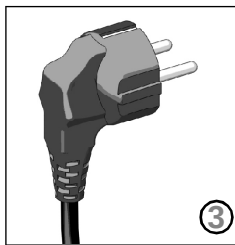

10. RESIDUAL RISKS

Even though the cutting unit is safe, operators must pay attention to preserve their and other people's safety.

- ⊗ At the end of the working operations, the metal parts could be very hot.
- ⊗ The cutting blade can work even if the protective guards are disassembled.

11. INSTALLATION AND USE

To install and use the cutting unit manually, proceed as follows:

- 1) Fix the cutting unit on level squares or angles by means of four 5MA screws, by inserting them in the four holes located in the motor lower cover (see pictures 4 and 5).

NOTE

The cutting unit can be installed in any position/angle: vertically, laterally and it can be turned upside down. It is not necessary that the aluminium base touches the machine table.

- 2) Lay the material to be cut;
- 3) Plug the cutting unit into the electrical outlet (see picture 6);
- 4) Put the material on the cutting foot (see picture 7);
- 5) Adjust the front mobile protection according to the thickness of the material to be cut (see picture 7);
- 6) Enable the switch; once it has been enabled, it lights up with a green light (see picture 8).






NOTE

Cutting unit SW100SL can work in a fixed position (the material moves) or it can move forward while the material is kept in the same position. Make sure the material to be cut is properly stretched, preventing it from curling.

WARNING



Never use the two bolts which fix the motor to the cutting part to fasten cutting unit SW100SL. This operation may cause the motor shaft to break. In this case, warranty is not valid.

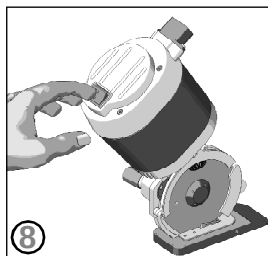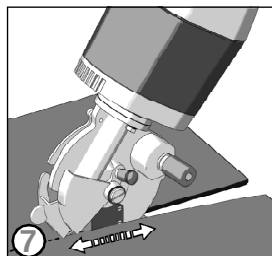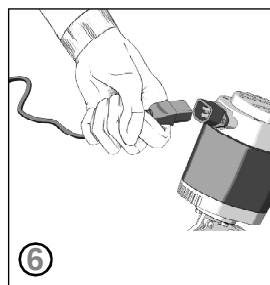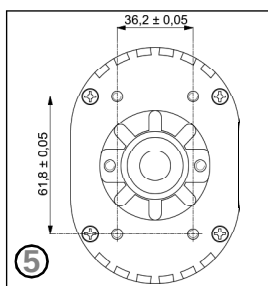
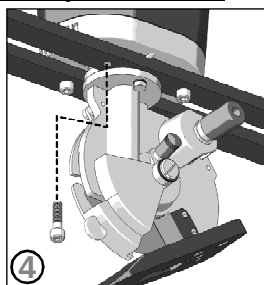


dal 1946

12. BLADE SHARPENING


After many hours of a continuative use of the cutting unit, or if it would not be able to cut anymore, it is necessary to sharpen the blade. To carry out this operation, start the blade and press sharpener "2" located on it for 3-4 seconds (by pressing push button "1", as shown in picture 9). Repeat the operation 2-3 times.

If the sharpening operation is not effective, check the wear of emery grinding wheel "3" (see picture 10). If emery grinding wheel "3" is too worn or dirty, replace it.

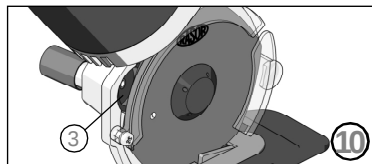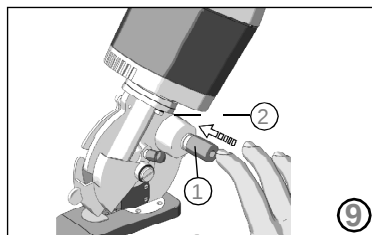

13. LUBRIFICAZIONE

Every 3-4 working days, it is necessary to lubricate the pair of gears. To carry out this operation, remove protective plug "A" located on the motor support of the cutting unit and fill it with lubricating grease Rasor. Screw plug "A" again few turns. Screw plug "A" some turns every 3-4 working days (see picture 11).

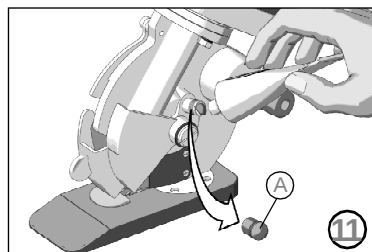

WARNING




The blade must never be dirty with grease or oil.

14. MOTOR BRUSH REPLACEMENT

Worn motor brushes could create a cutting unit malfunction (no starting, intermittent start, etc.), therefore it should be better to verify their wear periodically.

Open the motor cover by unscrewing 4 screws "4" on the cutting unit head (see picture 12). Remove the metal contacts that close the brushes with a slotted screwdriver (see picture 13). Remove the brushes and check their wear: if the graphite has a length shorter than 15 mm or it is uneven, replace it (see picture 14).

Close the metal contacts again making sure that they adhere well to the metal part of the brush. Finally close the motor cover again.



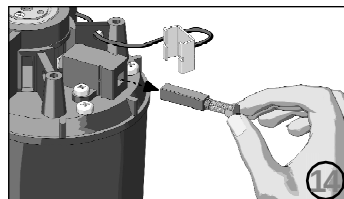
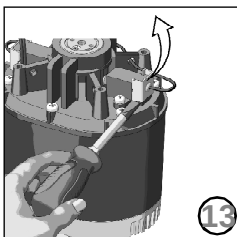
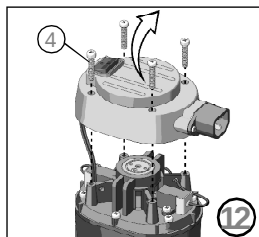


15. BLADE REPLACEMENT

If the blade is no more able to cut (even after repeating the sharpening operation several times) it is necessary to replace it. To carry out this operation, use wrench "1" and drift "3" locking the blade (shown in picture 15).

To replace the blade, proceed as follows:

- 1) Use some protective gloves in compliance with Italian Legislative Decree 81/08;
- 2) Remove the mobile front safety protection "A" (see picture 16) by unscrewing pin "C" and removing the two washers "D" as shown in picture 17. Remove the fixed rear safety protection "B" (see picture 16) by unscrewing the two cross screws "E" by means of the proper screwdriver (not supplied by the manufacturer) as shown in picture 18.
- 3) Insert drift "3" into hole "F" (see picture 19), so as to lock the blade (the hole on the blade must correspond to the one on the motor support).
- 4) Use wrench "1" to unscrew nut "G" and remove blade "H" (see picture 19).
- 5) Replace the worn blade with the new one "2", being careful to center the blade on the gear, in the correct position, and remember to assemble it, so that the RASOR writing can be seen by the operator.
- 6) Assemble all the components again and carry out the sharpening.

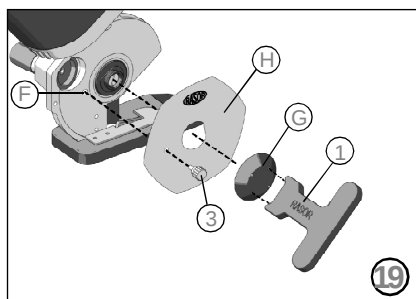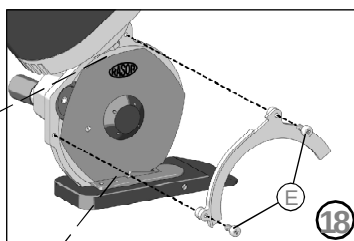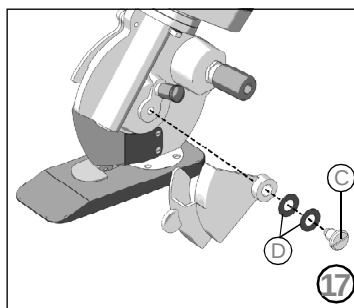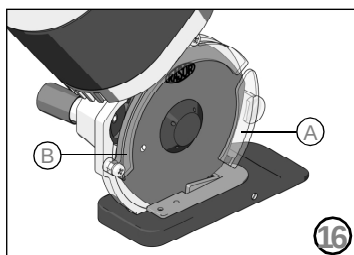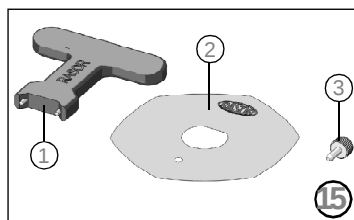

16. TROUBLESHOOTING

EN
12

PROBLEM	SOLUTION
The fabric is not cut or it gets stuck between the blade and the counterblade	Check that the blade and the counterblade are in contact
	Check the kind of fabric
	Sharpen the blade
	Check the fabric thickness
	Check the compatibility between blade and fabric
	Make sure that the motor turns correctly
	Reduce the speed of travel
The cutting unit is noisy	Check the counterblade integrity
	Carry out the lubrication
	Disassemble the blade and remove the material residues
	Check the wear of the pair of gears
The cutting unit starts slowly, works intermittently or it does not start	Check the electric connections
	Check the motor brushes
	Check the feeding cable
	Check possible electric problems on OEM machine

17. SPARE PARTS / EXPLODED VIEW

CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION	CODE	DESCRIPTION
10EH5	6-SIDE BLADE Ø 100 mm, H.S.S. STEEL	SW107900	SCREW FASTENING THE COUNTERBLADE HOLDER	T 100700	BRUSH HOLDER	T 104500	SCREW FASTENING THE FRONT PROTECTION
SW100500	CORRUGATED THRUST WASHER	SW108005	COUNTERBLADE HOLDER	T 100800	BRUSH HOLDER SPRING	T 104501	CONVEXED WASHER
SW101800	WORM SCREW - 3P, M 0.9	SW10815	CARBIDE COUNTERBLADE	T 100900	SCREW FASTENING THE BRUSH HOLDER	T 104700	GREASER CAP
SW1018CPL	COMPLETE PAIR OF GEAR	SW108200	SCREW FASTENING THE COUNTERBLADE	T 101000	MOTOR BEARING Ø 7 mm	T 104800	GREASER
SW1019S	MOTOR LOWER COVER	SW108600	EMERY Ø 25x9x6 mm	T 101200	ANTI-GREASE WASHER	T 10495	PLATE LOCKING THE THREAD
SW1020S	MOTOR UPPER COVER	SW1086CPL	COMPLETE SHARPENER	T 101300	COMPLETE ROTOR 220 V	T 105000	SCREW 2.0MA FASTENING THE PLATE LOCKING THE THREAD
SW1022S	MOTOR FRAME WITH MAGNETS, WITHOUT HANDLE	SW108700	SHARPENER PIN	T 101301	COMPLETE ROTOR 110 V	T 105200	MOTOR SUPPORT FIXING BOLT
SW1029S	ELECTRONIC FEEDING CIRCUIT	SW108800	EMERY SPRING Ø 11 mm	T 101500	FAN	T 105300	SPLIT WASHER
SW1037S	SCREW FASTENING THE FEEDING CIRCUIT	SW108900	SHARPENER BUSH	T 101600	MOTOR BEARING Ø10 mm	T 105400	ANTI-FRICTION BUSH
SW104101	SCREW FASTENING THE REAR PROTECTION GUARD	SW109000	EMERY SPRING Ø 6 mm	T 101700	ADJUSTING RING	T 105600	WASHER
SW104101S	REAR PROTECTION GUARD	SW109100	SHARPENER CAP WITH BEARING	T 101801	ELASTIC PIN	T 105700	RING LOCKING THE GEAR BEVEL BEARING
SW104101SC PL	REAR PROTECTION SET	SW109200	SCREW FASTENING THE SHARPENER CAP	T 102001	SCREW FASTENING THE UPPER COVER	T 105800	GEAR BEVEL BEARING
SW1044S	FRONT PROTECTION GUARD	SW109300	WASHER	T 102100	SCREW FASTENING THE LOWER COVER	T 106000	LEFT SCREW FASTENING THE GEAR BEVEL
SW1044SCPL	FRONT PROTECTION SET	T 100102	MOTOR CAP WITH SLOT	T 102201	PAIR OF PERMANENT MAGNETS	T 106100	RING UNDER BLADE
SW1055S	COMPLETE MOTOR SUPPORT	T 100200	SCREW FASTENING THE MOTOR CAP	T 102701	THREE-POLE PLUG WITH CABLE GLAND	T 106300	RING NUT FASTENING THE BLADE
SW1059CPL	COMPLETE GEAR BEVEL	T 100201	SCREW FASTENING THE CONNECTOR SOCKET	T 102702	THREE-POLE SOCKET	T 107000	SCREW FASTENING THE BASE/PLATFORM/SECTOR BLADE ASSEMBLING/DISASSEMBLING WRENCH
SW1074MS	LEFT BASE WITH BEVEL	T 100300	ADJUSTMENT LOCKING SCREW	T 1027CPL	FEEDING CABLE WITHOUT PLUG	T 107500	DRIFT LOCKING THE BLADE
SW1074MSC PL	COMPLETE LEFT BASE WITH BEVEL	T 100400	MOTOR BEARING ADJUSTMENT	T 102904	CAP SWITCH WITHOUT LIGHT	T 107600	DRIFT LOCKING THE BLADE
SW1076S	SPRING WITH DOWEL	T 100600	MOTOR BRUSHES	T 102904L	CAP SWITCH WITH LIGHT	T 107900	LUBRICATING GREASE



WARRANTY

Rasor® Elettromeccanica S.r.l. cutting unit has a 12 month warranty from the date indicated on the last page of this manual, except in case of different written agreements.

The warranty covers all manufacturing and material defects. Replacement and repair operations are covered only if carried out by our company and at our workshop. If in-warranty goods need to be repaired, **the customer must always send the complete machine to Rasor®. Single units will not be repaired under warranty.**

The material to be repaired must be sent CARRIAGE FREE.

Once the machine has been repaired, it will be sent CARRIAGE FORWARD to the customer. The warranty covers neither technicians' intervention on site nor the machine disassembly from the installation place.

If for practical reasons, one of our technicians is sent to the premises, the customer will be charged the costs plus the travelling expenses.

The warranty does not include:

- failure caused by wrong use or assembly,
- failure caused by external agents,
- failure caused by lack of maintenance or negligence;
- blades and parts subject to wear.

WARRANTY FORFEITURE:

- in case of arrearage or other breaches of contract,
- whenever changes or repairs are carried out on our cutting units without our prior authorization,
- whenever the serial number is tampered with or cancelled,
- whenever the damage is caused by improper use, bad treatment, bumps, falls and other causes not due to normal working conditions,
- whenever the unit seems tampered with, dismantled or previously repaired by unauthorized staff,
- in case the cutting units are used for purposes that are different from the ones described in this manual.

All repair operations carried out under warranty do not interrupt its duration.

All disputes will be settled in the court of justice of Milan (Italy).

We thank you in advance for the attention you will pay to this manual and we invite you to inform us of any change you deem necessary to improve it and make it more complete.

RASOR ELETTROMECCANICA SRL

Via Vincenzo Caldesi 6

20161 Milan · Italy

ph. +39 02 66 22 12 31

fax +39 02 66 22 12 93

info@rasor-cutters.com

www.rasor-cutters.com

FOLLOW US:

